
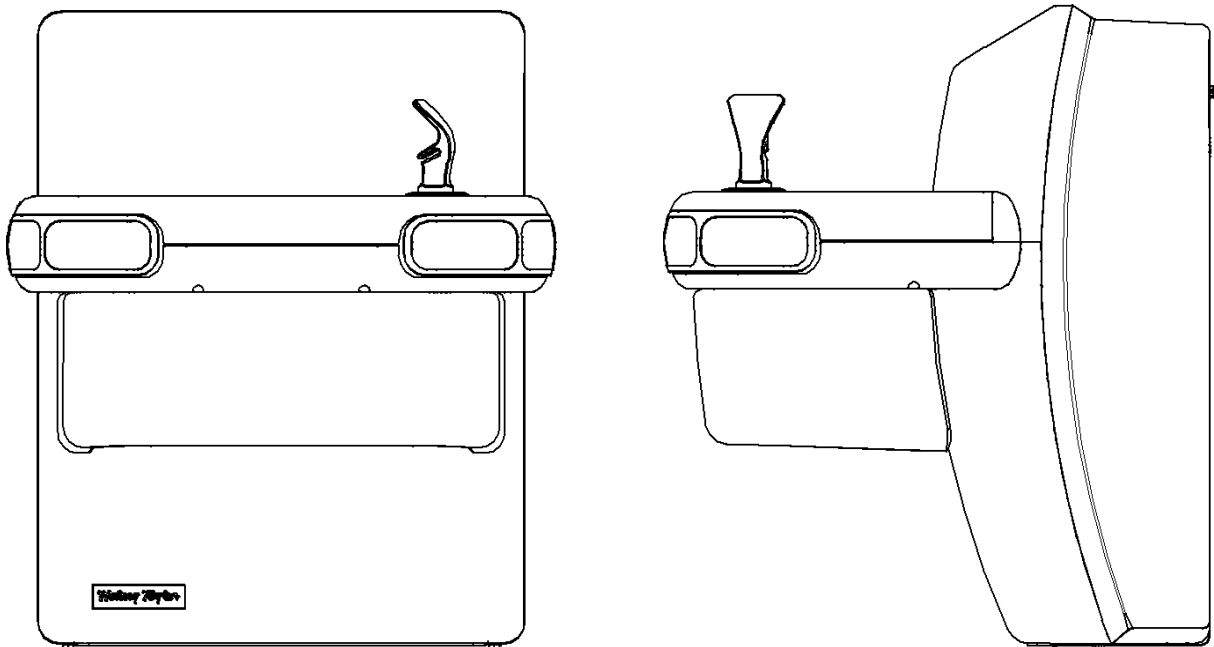


# CANE APRON INSTALLATION

TO INSTALL, PLACE THE CANE APRON UNDER THE DISPENSER BOTTOM AND HOLD IN PLACE. USING THE HOLES INDICATED BELOW, FASTEN THE CANE APRON TO THE DISPENSER BOTTOM USING THE SCREWS PROVIDED.

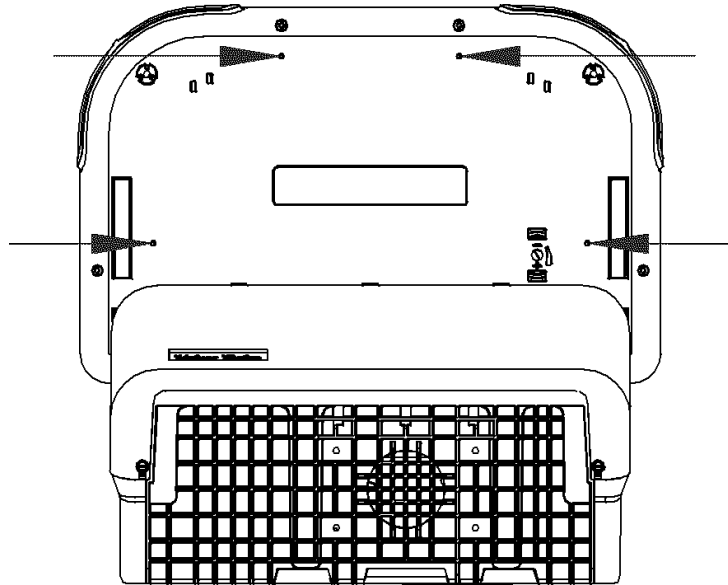

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR VISIT OUR WEBSITE [WWW.HALSEYTAYLOR.COM](http://WWW.HALSEYTAYLOR.COM)