




P8AM -- Water Valve Adjustment Procedure

Tools Required - T15 Torx Driver and Needle-Nose Pliers

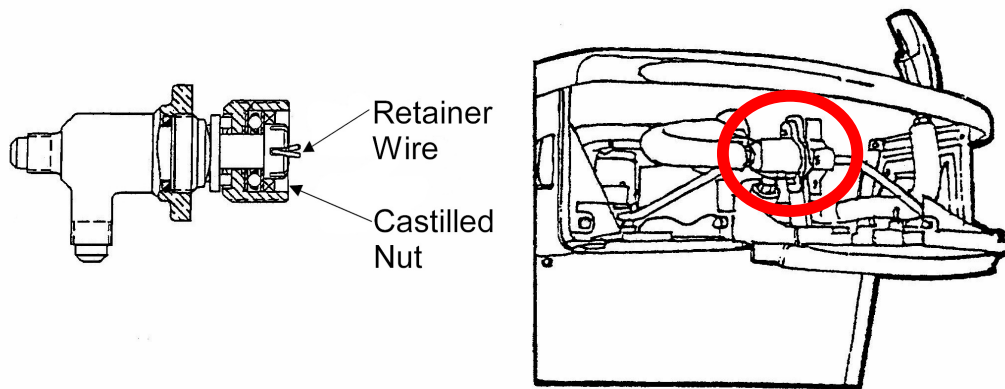

1) Remove Front Nose Assembly

- a) Use the T15 Torx Driver to remove the four retaining screws on the front nose left and right side toward the front of the cooler. Rotate the nose assembly down and out to remove.

2) Adjusting The Castilled Nut

- a) Remove the retainer wire from the head of the steam assembly
- b) Turn the brass castilled nut counter-clockwise until the water stops flowing from the bubbler. Lock castilled nut in position with the retainer wire.
- c) Reassemble the nose by reversing the steps in 1)a) above.