


Halsey Taylor Owners Manual

Models 4592 & 4593

Wall Mount Stone Fountains

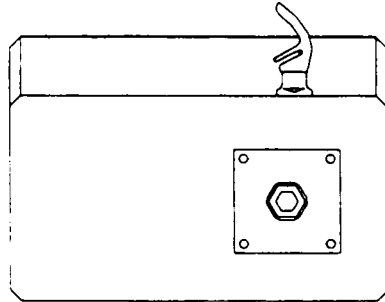


INSTALLER

Halsey Taylor Fountains are among the easiest to install Fountains on the market today. To assure you install these models easily and correctly, **PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL, AND OTHER APPLICABLE CODES.** After installation, leave these instructions with the Fountain for future reference.


IMPORTANT

ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON


1. Water supply 3/8" IPS. Waste 1-1/4" IPS. Contractor to supply waste trap and service stop valve in accordance with local code.
2. Connecting lines to be made of copper and should be thoroughly flushed to remove all foreign matter before being connected to cooler. This cooler is manufactured in such a manner that it does not in any way cause taste, odor, color, or sediment problems.
3. Connect cooler to building supply line with a shut-off valve and install a 3/8" water line between the valve and the cooler. Remove any burrs from outside of water line. Loosen nut on inlet side of "Y" strainer (see Fig.1) and insert water line to a positive stop - approx. 3/4". (see Fig.2) Finger tighten nut to lock tubing in place. (see Fig.1)
4. These products are designed to operate on 20 psig to 105 psig supply line pressure. If inlet pressure is above 105 psig, a pressure regulator must be installed in the supply line. Any damage caused by reason of connecting this product to supply line pressures lower than 20 psig or higher than 105 psig is not covered by warranty.

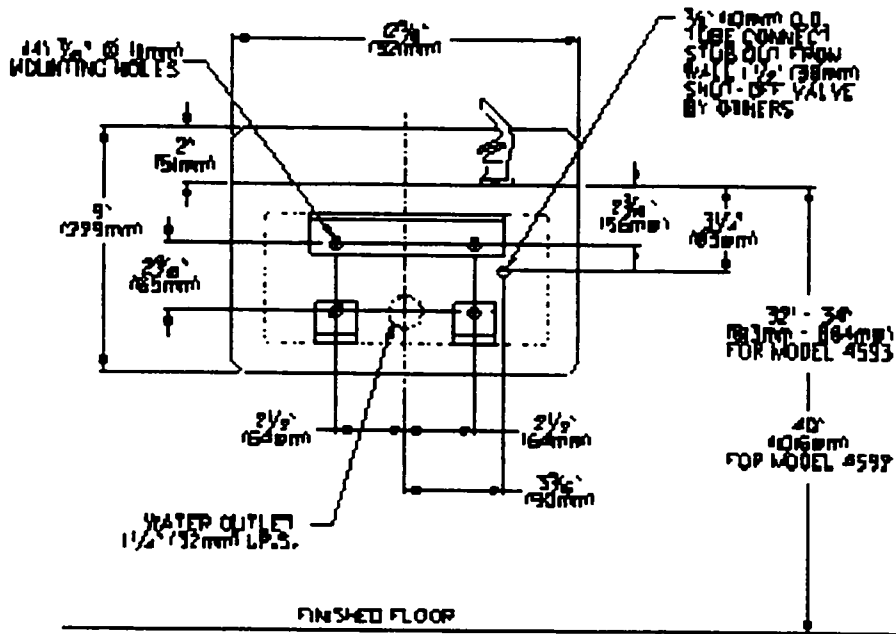

MODEL 4592

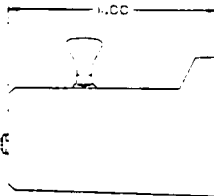

MODEL 4593

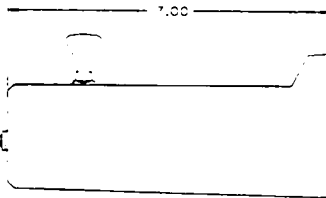

START UP

1. This fountain is to be mounted on a smooth, flat, finished wall surface with adequate support structure. **NOTE: Wall mounting structure must be capable of supporting 300 lb. load on fountain.**
 2. Establish rim height that fountain is to be mounted at.
 3. Refer to rough-in for plumbing.
 4. Locate and install trap.(trap not furnished)
 5. Install shut-off valve on building water supply.(valve not furnished)
 7. Locate and install fountain using 3/8" minimum lag screws or bolts (screws or bolts not furnished)
- CAUTION:** This fountain is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI.
8. Connect water supply and fountain drain.
 9. Turn on water supply and check all connections for leaks.

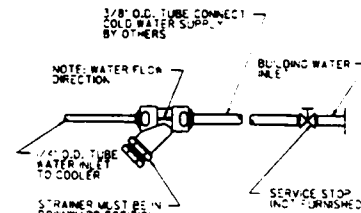


FIG. 1

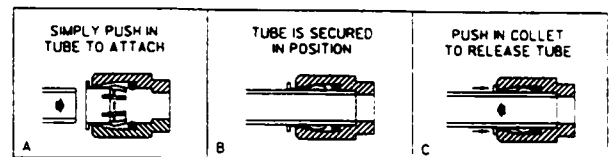


FIG. 2

PUSHING TUBE IN BEFORE PULLING IT OUT HELPS TO RELEASE TUBE

STREAM HEIGHT ADJUSTMENT: Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, remove items 1 & 2 (see Fig.4) and adjust screw on item 4. Clockwise adjustment will raise stream and counter-clockwise adjustment will lower stream. For best adjustment, stream should hit basin approx. 6-1/2" from bubbler.

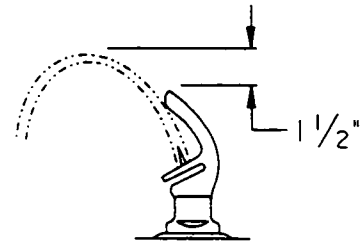


FIG. 3

ITEMIZED PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION
1	40089-C	Cover
2	40048-C	Button
3	10031-C	Regulator Retaining Nut
4	61313-C	Regulator
5	40169-C	Hex Nut
6	50985-C	Regulator Holder
7	170705042830	Basin
8	161637308640	Drain Plug
9	100147140560	Drain Gasket
10	160270508640	Strainer Plate
11	160316508640	Bubbler
12	100322740560	Bubbler Gasket
13	601573251550	Waste Line Assy (Model 4592)
	601573051550	Waste Line Assy (Model 4593)
NOT SHOWN	70788-C	Y-strainer

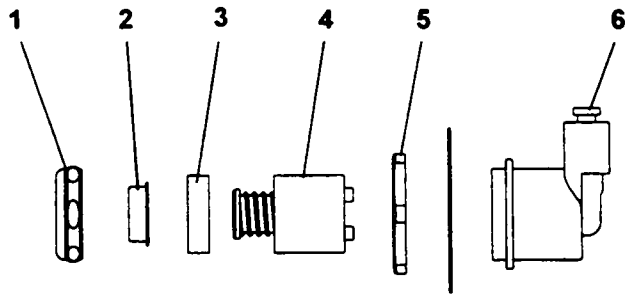
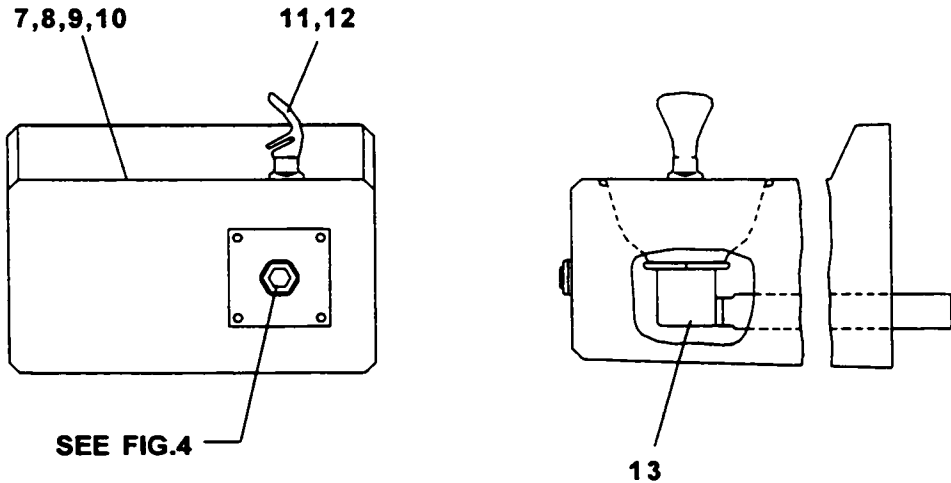


FIG. 4

TROUBLE SHOOTING AND MAINTENANCE

- Orifice Assy:** Mineral deposits on orifice can cause water flow to spurt or not regulate. Mineral deposits may be removed from the orifice with a small round file not over 1/8" diameter or small diameter wire. **CAUTION: DO NOT** file or cut orifice material.
- Stream Regulator:** If orifice is clean, regulate flow as in "START UP" instructions above. If replacement is necessary, see parts list for correct regulator part number.
- Temperature Control:** Factory set for 50°F water (±5) under normal conditions. For colder water, adjust screw on item no.13 clockwise.
- Ventilation:** Cabinet louvers and condenser fins should be periodically cleaned with a brush, air hose, or vacuum cleaner. Excess dirt or poor ventilation can cause no cold water and compressor cycling on the compressor overload protector.
- Lubrication:** Motors are lifetime lubricated.
- Actuation of Quick Connect Water Fittings:** Cooler is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing.(see Fig.2) To insert tubing, push tube straight into fitting until it reaches a positive stop, approximately 3/4".
- CAUTION:** Cleaning of Bronzitone models requires special care. Outer surfaces must be cleaned with a mild detergent or mixture of vinegar and water only, rinsed and wiped dry. Abrasive and acidic cleaners may eventually damage the Bronzitone finish.

Halsley Taylor®

P. O. BOX 8001
OAK BROOK, IL 60021
(708) 574-2800

+